


DR125 Set-up Instructions

Removal from crate


1. Remove cardboard carton from metal frame.




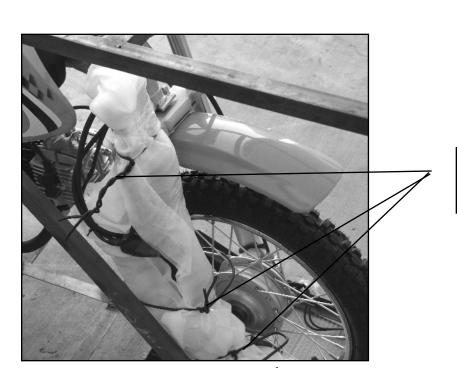


2. Remove wire straps and foam covering from handlebar.

Removal from crate

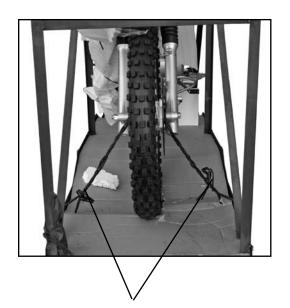

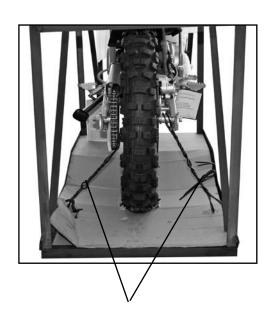

3. Remove wire straps from front forks and rear swing arm.

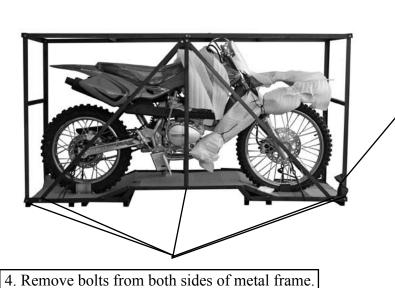


Remove foam covering and tool kit

5. Remove bolts holding metal frame to handlebar bracket.

Tool Kit


Handlebar Assembly

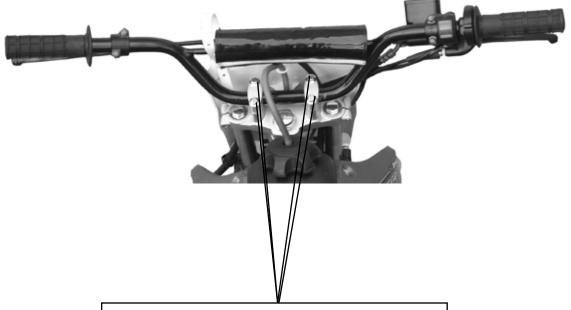

6. Install handlebars by handlebar clamp provided. Torque bolts to 25Nm (18.5ft.lb.)

Gas and Oil

 7. Fill engine with correct amount of oil. Refer to owners manual for oil types and quantity.





9. Refer to owners manual for proper starting instructions.

!!WARNING!!

This motorcycle may be shipped with packing oil in the engine. This oil should be drained and replaced with new engine oil as described in the owners manual. Never attempt to start the engine without first replacing the engine oil with the proper amount and grade as described in the owners manual.